



VERSION 2020-08-05

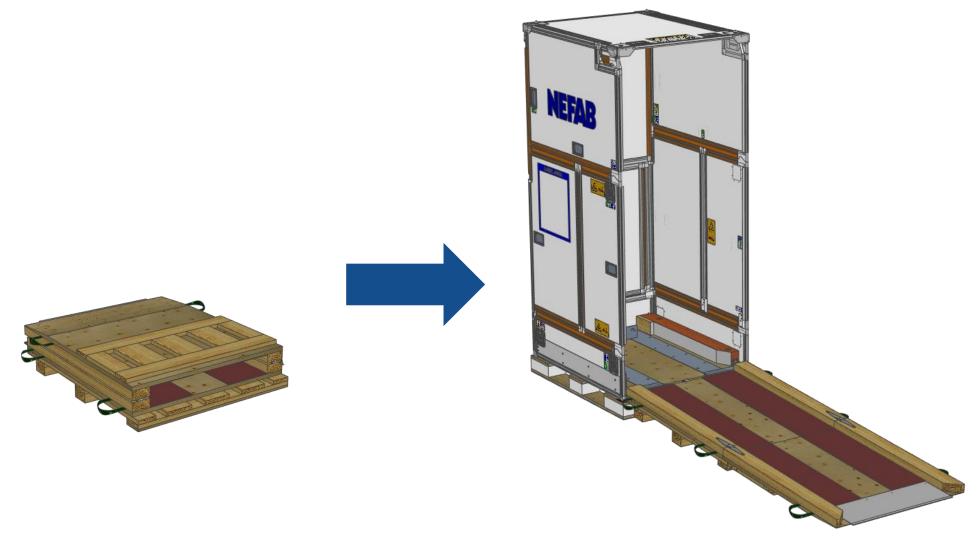



REQUIRED PEOPLE AND EQUIPMENT

- This job requires two people
- Use steel-toe safety boots
- Use forklift to transport folded ramps over longer distances

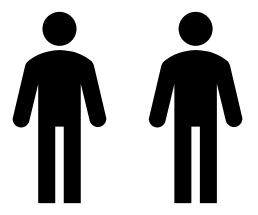






RACKPAK SETUP INSTRUCTIONS



REQUIRED SPACE


- 2.5 meter in front of product
- 1.0 meter on either side of product

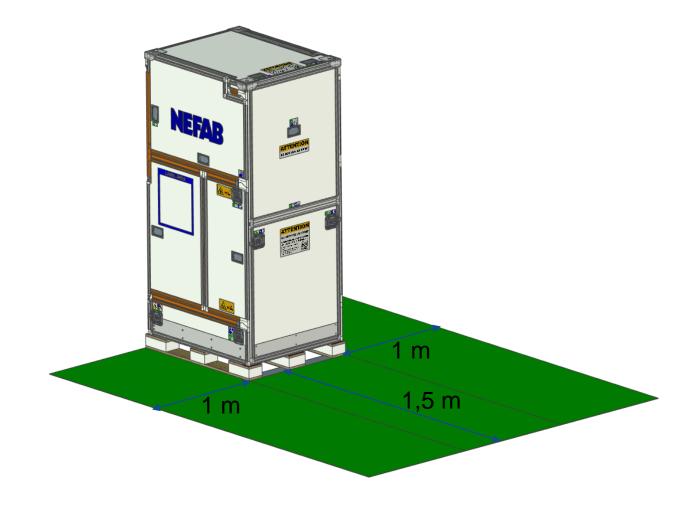




SAFETY FEATURES

Primary locking mechanism: metal tabs protruding from the ramp's brackets fall into slots at the front edge of the RackPak pallet.

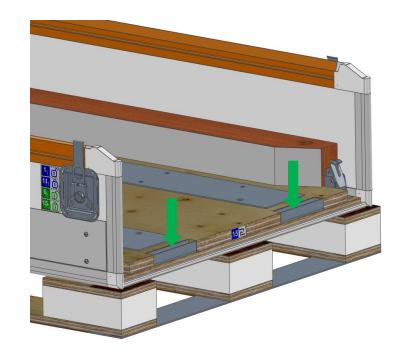


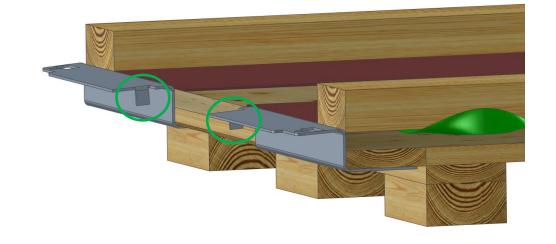




SAFETY FEATURES

Secondary locking mechanism: locking arms will automatically fall into holes in the pallet brackets.

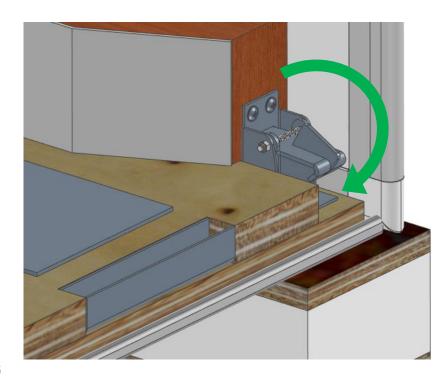

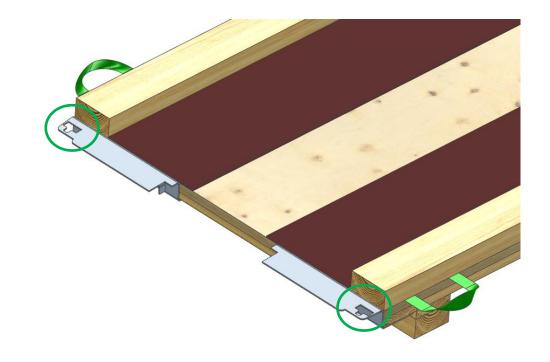



PLACING PROCEDURE


Use a forklift truck to transport the folded ramp to close vicinity of the RackPak crate






PLACING PROCEDURE

Standing on both sides of the folded ramp, use the lower four handles (highlighted) to lift the ramp in front of the RackPak crate.

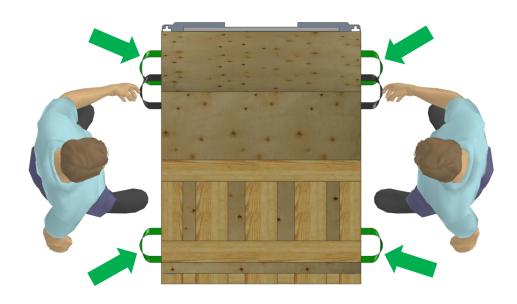

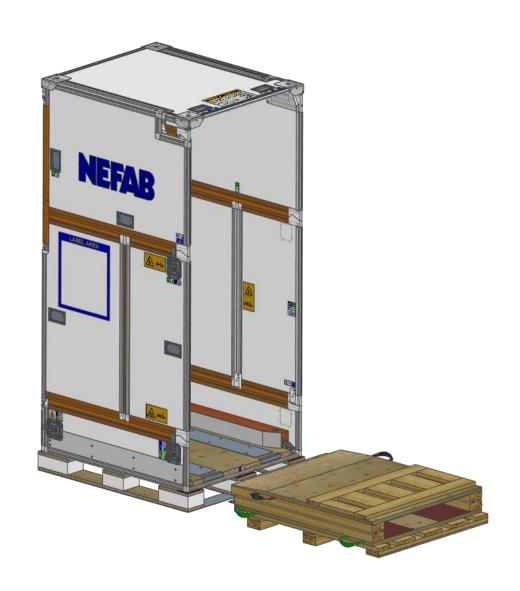



PLACING PROCEDURE


Using the two top handles (highlighted), open the ramp 180°






PLACING PROCEDURE

Swing both latch arms in their upper position

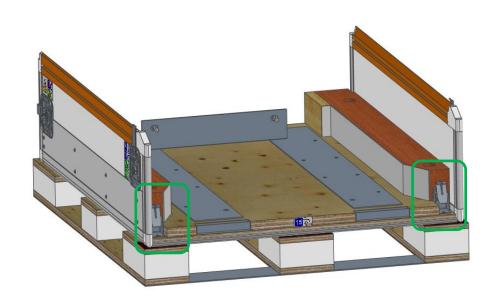


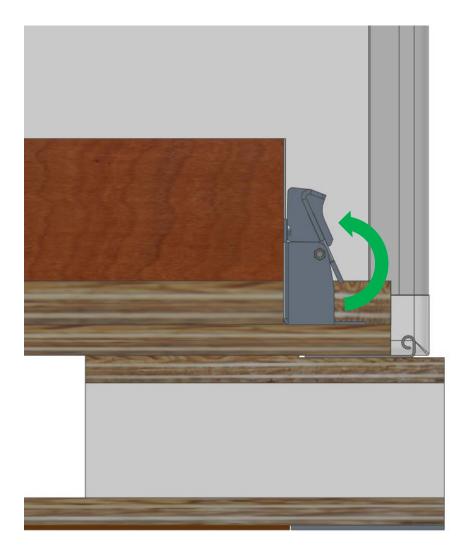



PLACING PROCEDURE

Using front handles (highlighted), lift the ramp over the front edge of the RackPak pallet. Position so that metal tabs are above the slots in the pallet deck.

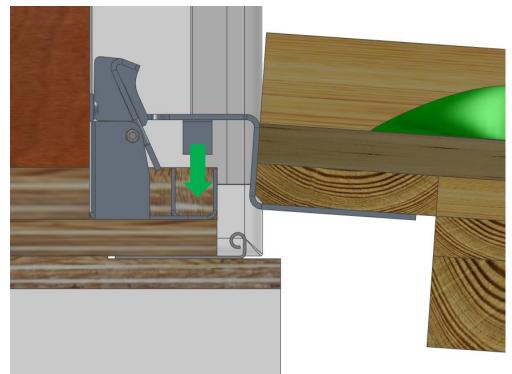






PLACING PROCEDURE

Lower ramp onto pallet deck. This will cause the secondary latches to close.

The ramp is now placed securely.

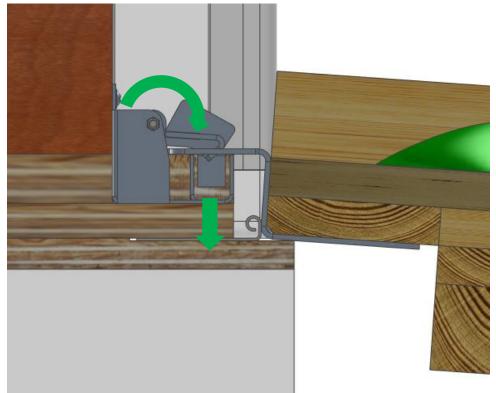






REMOVAL PROCEDURE

Use rear handles (highlighted) to swing the lower ramp section upwards and onto the upper ramp section.



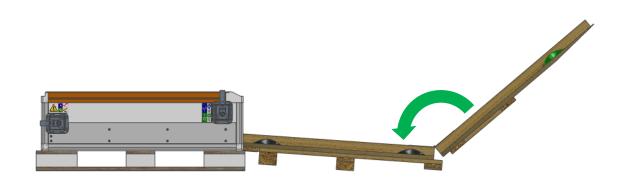




REMOVAL PROCEDURE

Use the four lower handles (highlighted) to lift the folded ramp straight upwards. The secondary latches will automatically detach.



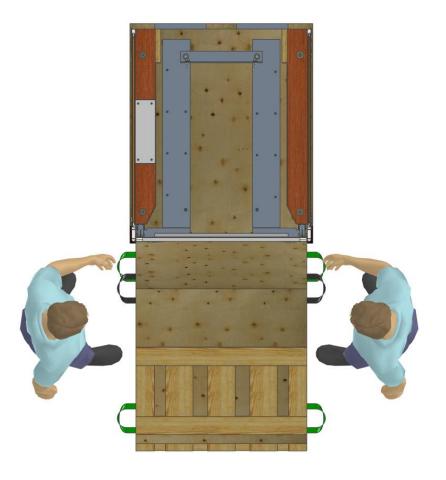



REMOVAL PROCEDURE

Place pallet on the floor and remove with forklift truck.



