


SAFETY INSTRUCTIONS



One person needed
Safety shoes needed
Forklift optional

SAFETY INSTRUCTIONS

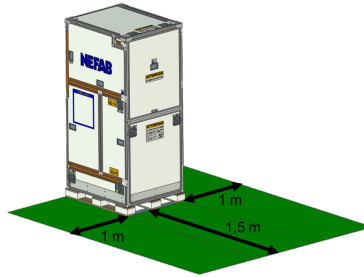


Needed space:
2.5 m in front
1.0 m on both sides

RAMP PLACEMENT STEP 1




Use forklift to transport ramp to close vicinity of RackPak crate

RAMP PLACEMENT STEP 2

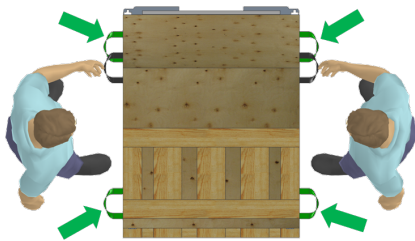


Use lower four handles to lift folded ramp

RAMP PLACEMENT STEP 3

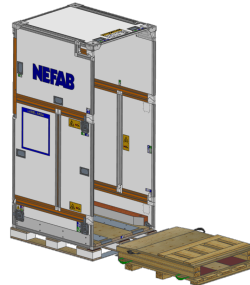


Place ramp directly in front of RackPak crate

RAMP PLACEMENT STEP 4

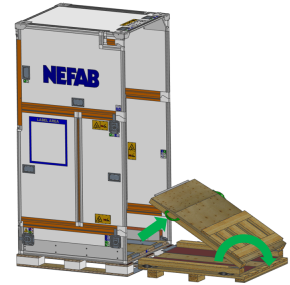


Use upper two handles to open the ramp 180°

RAMP PLACEMENT STEP 5

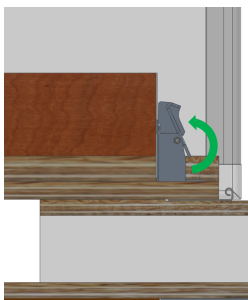


Flip both latch arms on RackPak pallet to upwards position

RAMP PLACEMENT STEP 6

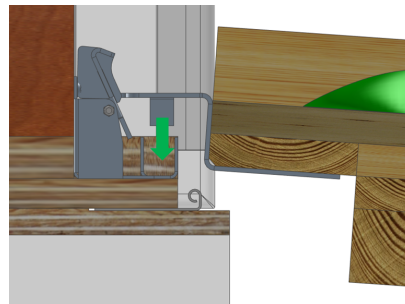

Use front handles, place ramp brackets directly over slots

RAMP PLACEMENT STEP 7

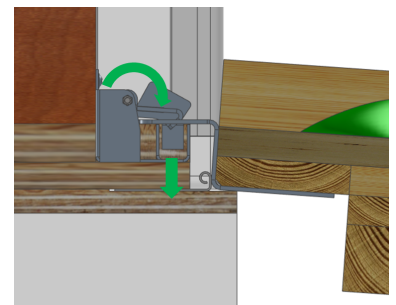


Lower bracket tabs into pallet slots. This makes both latches close automatically.

RAMP REMOVAL STEP 1



Use rear two handles to fold lower ramp on top of upper ramp

RAMP REMOVAL STEP 2

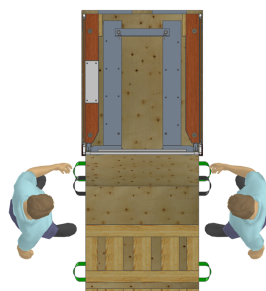

Use lower four handles to lift folded ramp straight upwards. This releases both latches.

RAMP REMOVAL STEP 3



Place ramp in front of pallet. Use forklift to remove.